


Tellermate | Touch

We hope you have found this guide useful. If you have any questions, please call us on:
1-800-TELMATE

Quick Start Guide

An introduction to the basic functions of your Tellermate Touch

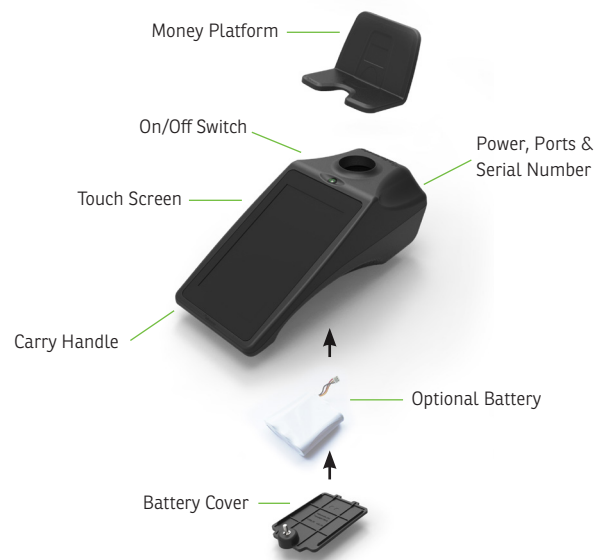

Using Your Touch

- Only use Touch with the power supply provided, (use of alternative power supplies may cause damage).
- Set Touch on a stable, flat surface, free from vibrations and draughts (air conditioning, fans, etc).
- Count loose coins in Tellercups.
- Place items on Touch carefully; do not drop them.
- Check the count mode carefully; e.g. do not count coin rolls in cup mode.
- Sort money before counting; do not count mixed denominations.
- Turn Touch OFF and unplug all cables before moving.
- Do not leave objects on the Money Platform when Touch is not in use, not even a cup.
- Touch cannot identify counterfeit money.
- Charge your battery (if supplied) for 12 hours before first use; replace it when advised.



Tellermate Inc.
3600Mansell Road, Suite 500
Alpharetta, GA 30022 USA

+1 (770) 220 0930
info@tellermate-us.com
www.tellermate.com


 **Tellermate**
Count | Control | Connect

Display

Home Screen

Touch to select a Count

Select Settings

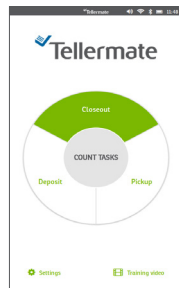

Set Time and Date

From the 'Home' screen Press 'Settings' then press 'Date & time'

Press a section that is green to automatically select a numeric keypad. Adjust the date & time as required.



Training Video

To review training video, from the 'Home' screen press 'Training Video', then select one of the chapters to watch, we recommend watching Setup, and Closeout for a basic overview.

Select a Count Task

Touch Count Tasks are set up to enable the fastest possible counting. Count Tasks dictate running totals, denomination order and banks. Ensure you choose a Count Task that closely matches your current task. From the 'Home' screen press the dial for either 'Closeout, Pickup, or Deposit'.

How to Count Coins

Coins
TellerCup/Roll  



Select the denomination by either tapping on the currency dial or swiping. Press the icon 'TellerCup' to switch between 'TellerCup' or 'Roll'.

Place either a TellerCup filled with coins or a roll of coins onto the Money Platform. Touch will display the value of its contents.

In certain Count Tasks, Touch will automatically add the value to the running total and move to the next denomination when the item is removed.

Full Rolls 

Individually stack up to 5 rolls on the Platform.

If 'Suspect Roll' appears, remove the last roll and count loose as detailed above.

How to Count Bills

Loose Bills 

Swipe the currency dial to select 'Bills'. Stack bills on the Money Platform 15-20 at a time.




Bundled Bills 





Press the  image to select strap.

Individually place up to 5 bundles on the Money Platform.

If 'Please Remove Strap' appears on the display, remove the last bundle, remove the strap, and count as loose notes.

End of Count Options

To complete a count press  to enter the 'Review' page. From the count review the following options will be displayed:

-  Send data to a Tellermate printer.
-  Send data to PC.
-  End current register and start a new register of the current counting task type.
-  End current count and return to Home screen

count	bank
1c	x 950 9.50
5c	x 280 14.00
10c	x 240 24.00
25c	x 162 40.50
\$1	x 92 92.00
\$5	x 22 110.00
\$10	x 31 310.00
\$20	x 41 820.00
Total \$ 1,420.10	

Connections

Touch can be connected via Network or WiFi. Software updates can be carried out using a USB stick.



Power supply

Ethernet for Network Connection

USB A ports for Tellermate Software updates

Pairing Bluetooth Printer

Ensure printer is turned on. From the 'Home' screen press 'Settings', 'Port', then press 'Bluetooth'. The Touch will search for printer. The printer is listed as SPP-R200III_. Use the slide bar on the right to select printer.

Connecting to Wi-Fi

From the 'Home' screen press 'Settings', 'Port', then press 'Wi-Fi'. The Touch will search for available networks. Select the Wi-Fi network, then select Password to enter your network password. Press the green check to confirm entry. Press the green check again to confirm network settings.

Touch Viewer Registration

To register your device with Touch Viewer, visit: tellermatetouchcloud.com

Complete Guides

For full instructions on Wi-fi connection, Bluetooth pairing, Touch Viewer Registration, and more visit: www.tellermate.com/us/touch-documentation