

Customer Helpline
01633 276 868

Tellermate Touch Tray Installation Guide



The Tellermate Touch Tray is an accessory and is not included in a standard kit. If you do not have a tray and would like to purchase, please contact your sales representative to place an order.

Place the printer on the tray as shown below. Ensure mounted screw is aligned with printer. Twist clockwise to tighten the button screw until secure.



Now you can place the Touch unit on the tray as shown below. Ensure the back tabs fit into place, then lay the Tellermate Touch down. Insert the black button screw and twist clockwise until secure.



The Tellermate Touch tray is ready to use.

If you need any help with your Tellermate, please call the Helpline:

01633 276 868