



CALIBRATING YOUR TELLERMATE NOTES

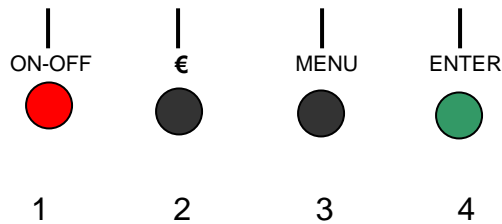

GUIDE TO CALIBRATING NOTE DENOMINATIONS

1. Whilst in the normal counting mode, press the **MENU** key. This takes you to the “**Menu**” screen.
2. “**Options**”, is highlighted, press the **ENTER** key. This takes you to the “**Options**” screen.
3. Again, using the **NOTES** key, select “**Supervisor**” (option 6), then press **ENTER**. This takes you to the “**PIN Number**” screen.
4. When Tellermate asks for a PIN number, using the Tellermate “soft” keys (see diagram above), key in:
1 (ON-OFF) 4 (ENTER) 2 (€) 4 (ENTER). This takes you to the “**Supervisor**” screen.
5. As Setup/Calibrate is highlighted, press **ENTER**.
6. As “**NOTES**” is highlighted, press **ENTER**. You will now be in the “**Press WRAP for Calib**” screen.
7. Press the WRAP key to select “Calibrate Notes”. Using the **NOTES** key, select the note denomination you wish to recalibrate. Then press **ENTER**.
8. Tellermate will now ask you to put 10 loose Notes onto the hod and press **ENTER**. Count out 10 notes of the denomination to be calibrated, put them onto the hod, then press **ENTER**. You are then asked to put 5 to 10 more Notes (the quantity between these numbers does not matter) onto the hod.
9. Continue to follow the on screen instructions until Tellermate beeps, and shows the “**Save new weight**” screen. As “**Save new weight**” is highlighted press **ENTER** to install the newly calibrated weight.
N.B. If you do not have enough Notes, Coins etc follow the on-screen instructions as usual. When you have put your last item onto the hod, and the Tellermate has adjusted its calibration reading, remove all the items from the hod. You will reach the “Cal not Completed” screen. Using the NOTES key select “Save new weight”, then press ENTER.
10. ***When you have calibrated all the required Note denominations, press END repeatedly until you return to normal counting mode.***

CALIBRATING YOUR TELLERMATE COINS

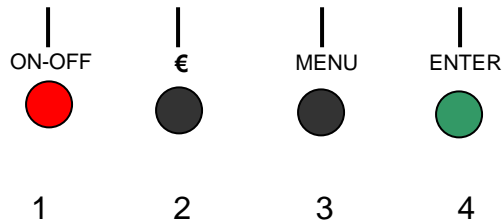

GUIDE TO CALIBRATING COIN DENOMINATIONS

1. Whilst in the normal counting mode, press the **MENU** key. This takes you to the “**Menu**” screen.
2. “**Options**”, is highlighted, press the **ENTER** key. This takes you to the “**Options**” screen.
3. Again, using the **NOTES** key, select “**Supervisor**” (option 6), then press **ENTER**. This takes you to the “**PIN Number**” screen.
4. When Tellermate asks for a PIN number, using the Tellermate “soft” keys (see diagram above), key in:
1 (ON-OFF) 4 (ENTER) 2 (€) 4 (ENTER). This takes you to the “**Supervisor**” screen.
5. As Setup/Calibrate is highlighted, press **ENTER**.
6. Using the **NOTES** key, select “**COINS** and press **ENTER**. You will now be in the “**Press WRAP for Calib**” screen.
7. Press the WRAP key to select “**Calibrate Coins**”. Using the **NOTES** key, select the coin denomination you wish to recalibrate. Then press **ENTER**.
8. TY will now ask you to “**Put container on hod**”. Place the empty coin scoop supplied with the TY onto the hod. Then, as directed by the TY count out 10 coins of the denomination to be calibrated, and put them in to the scoop and press **ENTER**. You are then asked to put 5 to 10 more Coins (the quantity between these numbers does not matter) in to the scoop.
9. Continue to follow the on screen instructions until TY beeps, and shows the “**Save new weight**” screen. As “**Save new weight**” is highlighted press **ENTER** to install the newly calibrated weight.
N.B. If you do not have enough Notes, Coins etc follow the on-screen instructions as usual. When you have put your last item onto the hod, and the TY has adjusted its calibration reading, remove all the items from the hod. You will reach the “Cal not Completed” screen. Using the NOTES key select “Save new weight”, then press ENTER.
10. *When you have calibrated all the required Coin denominations, press END repeatedly until you return to normal counting mode.*